

Option 1: Canopy Mounted Driver

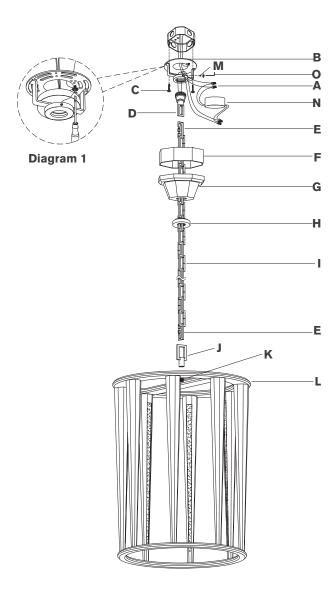

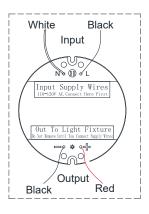

Galahad Medium Lantern

Item # TOB5718

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Wire Cutters
Wire Strippers Chain Pliers Slip Joint Pliers
Measuring Tape

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Install mounting plate **(B)** to junction box and secure with mounting screws **(C)**.
- 3. Remove collar ring (H) from collar loop (D).
- 4. Thread collar loop **(D)** to mounting plate **(B)** and secure using set screw **(M)** with provided wrench **(O)**.
- 5. Determine desired overall length, and amount of chain (I) needed. Shorten chain (I) using chain pliers (Keep extra chain).
- 6. Install driver housing **(F)** and canopy **(G)** to mounting plate **(B)** and secure with collar ring **(H)**.
- 7. Thread fixture loop (**J**) to the fixture loop (**K**).
- 8. Attach chain (I) to collar loop (D) and fixture loop (J) using quick link (E). Secure quick links (E).
- Thread fixture wire and ground wire through chain (I).
 NOTE: When you reach the collar loop, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box.
- 10. Separate two sides of molded wire, and strip insulation on each 5/8".
- 11. Loosen collar ring **(H)** and let canopy **(G)** and driver housing **(F)** slip down chain **(I)** carefully.











Option 1: Canopy Mounted Driver

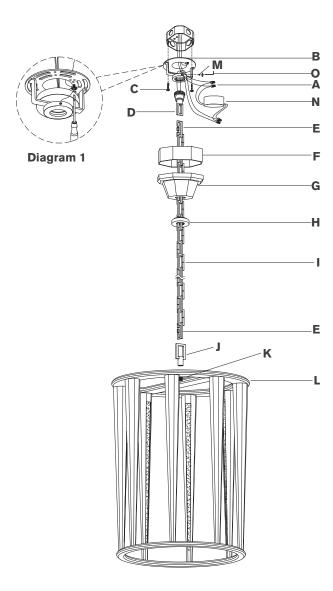

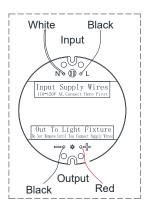

Galahad Medium Lantern

Item # TOB5718

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

12. Twist all fixture wires together. Slip through center hole of collar loop **(D)**.

NOTE: Untwist wires and separate to prepare for connection.

- 13. Connect fixture neutral wire (ribbed) to the driver output neutral wire (black) using wire nut (A).
- 14. Connect fixture hot wire (smooth with markings) to the driver output hot wire (red) using wire nut (A).
- 15. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 1). Tighten.

NOTE: It is imperative that the fixture is grounded.

- 16. Connect driver input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
- 17. Connect driver input hot wire (black) to the supply hot wire (usually black) using wire nut (A).

CAUTION: Do not reverse the hot and neutral connections.

- 18. Insert driver (N) into mounting plate bracket.
- 19. Install canopy **(G)** and ring **(F)** to the mounting plate **(B)** and secure with collar ring **(H)**.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.











Option 2: Ceiling Mounted Driver

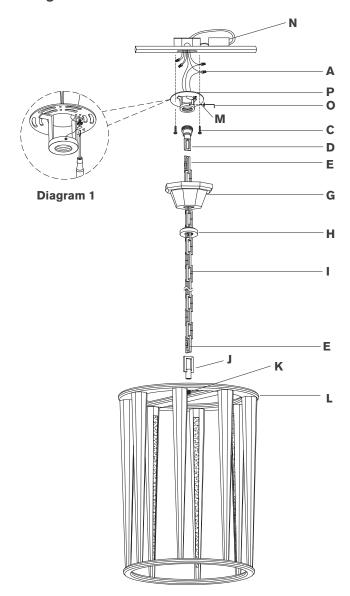

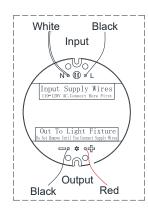

Galahad Medium Lantern

Item # TOB5718

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Wire Cutters
Wire Strippers Chain Pliers Slip Joint Pliers
Measuring Tape

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Place driver **(N)** into ceiling and route all wires through one of knockouts in the junction box.
- 3. Locate shorter profile mounting plate **(P)** for option 2 mounting. Install shorter mounting plate **(P)** to junction box and secure with mounting screws **(C)**.
- 4. Remove collar ring **(H)** from collar loop **(D)**.
- 5. Thread collar loop **(D)** to shorter mounting plate **(P)** and secure using set screw **(M)** with provided wrench **(O)**.
- 6. Determine desired overall length, and amount of chain (I) needed. Shorten chain (I) using chain pliers (Keep extra chain).
- 7. Thread fixture loop (J) to the fixture loop (K).
- 8. Attach chain (I) to collar loop (D) and fixture loop (J) using quick link (E). Secure quick links (E).
- Thread fixture wire and ground wire through chain (I).
 NOTE: When you reach the collar loop, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box.
- 10. Separate two sides of molded wire, and strip insulation on each 5/8".
- 11. Loosen collar ring **(H)** and let canopy **(G)** and driver housing **(F)** slip down chain **(I)** carefully.











Option 2: Ceiling Mounted Driver

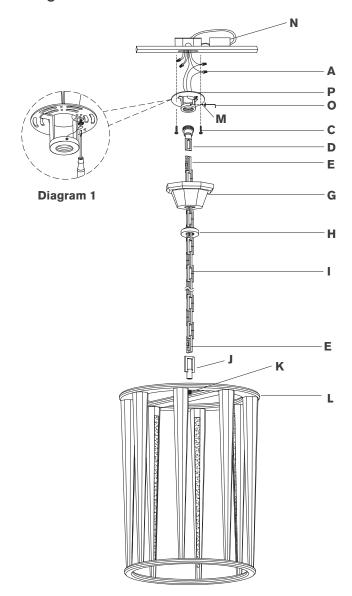

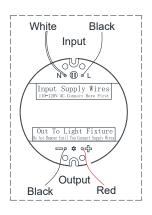

Galahad Medium Lantern

Item # TOB5718

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

12. Twist all fixture wires together. Slip through center hole of collar loop **(D)**.

NOTE: Untwist wires and separate to prepare for connection.

- 13. Connect fixture neutral wire (ribbed) to the driver output neutral wire (black) using wire nut (A).
- 14. Connect fixture hot wire (smooth with markings) to the driver output hot wire (red) using wire nut (A).
- 15. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 1). Tighten.

NOTE: It is imperative that the fixture is grounded.

- 16. Connect driver input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
- 17. Connect driver input hot wire (black) to the supply hot wire (usually black) using wire nut (A).

CAUTION: Do not reverse the hot and neutral connections.

18. Install canopy **(G)** to shorter mounting plate **(B)** and secure with collar ring **(H)**.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.







